

# INSTRUCTION MANUAL

## IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

1. To reduce the risk of electrical shock, disconnect both normal and emergency power sources before servicing.
2. This is a sealed unit. Replace the entire unit when necessary.
3. Installation and servicing should be performed by qualified personnel only.
4. This unit must be grounded. See the wiring diagrams for details.
5. This unit must be connected to the unswitched normal source of power (120 – 277 Vac, 50/60 Hz) to monitor for a power failure.
6. This unit must be fed from the same branch circuit as the **AC PoE Switch / Node** during normal mode.
7. This unit should be mounted in locations and heights where it will not readily be subjected to tampering by unauthorized personnel.
8. This unit should be mounted in a grounded enclosure or wireway within a luminaire. It is suitable for factory or field installation.
9. This product is suitable for use in damp locations where the ambient temperature is in the range of -20 °C minimum to 65 °C maximum. This product is also suitable for use in sealed and gasketed fixtures.
10. This product is not suitable for heated air outlets, wet, or hazardous locations.
11. This Emergency Lighting Control Device is intended for use with designated luminaires powered in emergency-mode from a remote emergency source of power. Additionally, it is intended for use with low voltage lighting systems such as, but not limited to, Power over Ethernet (PoE) lighting systems.
12. Use of accessory equipment not recommended by the manufacturer may cause an unsafe condition, void the warranty, or result in non-compliance with regulations.
13. Do not mount near gas or electric heaters. Do not use this product for other than its intended use.
14. Install in accordance with the National Electrical Code and local regulations.

## SAVE THESE INSTRUCTIONS