



ELECTRICAL SPECIFICATIONS:

Constant Current LED Driver

Model Number AC40CDI.05BPB0M

Input Voltage: 347V


Input Frequency: 50/60Hz **Bottom Mount/Leads** Dim-to-1% (Default)

	itput wer	Input Pow- er	Input Current	Min PF (full Ioad)	Max THD (full load)	Output Voltage	Output Current	T case Max	Min Starting Temp ^{**}		Efficiency Up To	Dimming Protocol	Dimming Range
40)W	47W	0.143@347V	>0.90	<20	23-38V	250mA- 1050mA	90°C	-40°C	64	85	0 to 10V	10 to 100%

PHYSICAL:

** This driver can operate down to -40°C in a non-dimming condition. Below 0°C some ficker may be observed.

WIRING:

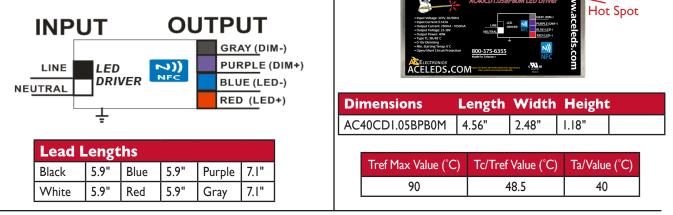

SAFETY:

- UL and cUL Recognized
- Class 2
- UL outdoor Type I
- · Class A sound rating
- Overload Protection
- Open/Short Circuit Protection
- · LED driver has a life expectancy of
- **INSTALLATION:**
- IP 64
- Max Remote installation distance is 18 ft
- · LED driver cases should be grounded

- 50,000 hours at Tcase of ≤75°C
- · LED driver has a life expectancy of 100,000 hours at Tcase of ≤65°C
- Warranty: 5 yrs based on max case temp of <75°C; 3 yrs based on max case temp of 90°C*
- Input/Output Isolation

- FCC Title 47 CFR Part 15
- Surge Protection (3 Kv)
- Dim-To-Off Programming Option o Active: Code = A2 03 01 0E o Inactive: Code = A2 03 00 0E
- - · LED drivers shall be installed inside electrical enclosures
 - 18 AWG 600V/105C tinned stranded copper lead-wires are required for installation

*AC Electronics/AC LED Power Designs warrants to the purchaser that each LED Driver will be free from defects in material or workmanship for a period of US 5 years when operated at max case temp of up to <75°C; 3 years from date of manufacture when operated at a max case temp of up to 90°C when properly installed and under normal conditions of use. See aceleds.com for complete warranty policy.

3401 Avenue D, Arlington, TX 76011 • 800-375-6355 • www.aceleds.com

Data is based upon tests performed by AC Electronics in a controlled environment and representative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.






CONTROL THE IOUT WITH THE PROGRAMMING WAND. DOWNLOAD SOFTWARE FROM http://www.aceleds.com/programmable.php

IOUT/VOUT CURVE

Use with NFC-V Reader App Available Free at Google App Store

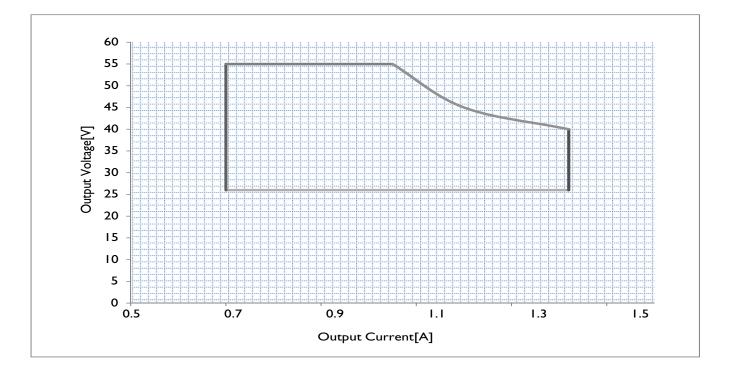

Phone Instructions

 First you must have a Android device (phone/tablet) with NFC-V app downloaded.

 Open App; then place the device on top of the driver matching up sensors untile it syncs up

 Basic format

 Write
 To Check: Read

 Insert the appropriate code from chart above
 Read

 Write
 Shows you the

 Successfully written will appear
 This is where th

To Check: Read Read Shows you the Block - 00 00 00 00 This is where the code you input appears